

PRIMA TRASMISSIONE
SCATOLA BAGNO D'OLIO

DESCRIZIONE

TRANSMISSION PRIMAIRE
BOITE A HUILE

DESCRIPTION

PRIMARY TRANSMISSION
OIL BOX

DESCRIPTION

HAUPTANTRIEB
ÖL - GETRIEBEKASTEN

BESCHREIBUNG

N.	COD. - KODE	DESCRIZIONE	DESCRIPTION	DESCRIPTION	BESCHREIBUNG
1	DR 3010A	Trasmissione sinistra	Transmission gauche	Left transmission	Antriebskasten links
1	DR 3010B	Trasmissione destra	Transmission droite	Right transmission	Antriebskasten rechts
2	DR 3020	Vite	Vis	Screw	Schraube
3	DR 3030	Staffa	Etrier	Bracket	Halter
4	DR 3040	Rondella	Rondelle	Washer	Scheibe
5	DR 3050	Dado	Ecrou	Nut	Mutter
6	DR 3060	Supporto	Palier	Support	Halter
7	DR 3070	Staffa	Etrier	Bracket	Spanneisen
8	DR 3080	Dado	Ecrou	Nut	Mutter
9	DR 3090	Guida	Guide	Guide	Gewindestange
10	DR 3100	Molla	Ressort	Spring	Feder
11	DR 3110	Tenditore	Tendeur	Tightener	Spanner
12	DR 3120	Cuscinetto	Roulement	Bearing	Lager
13	DR 3130	Pignone	Pignon	Pinion	Ritzel
14	DR 3140	Seeger	Circlips	Snap ring	Seegerring
15	DR 3150	Seeger	Circlips	Snap ring	Seegerring
16	DR 3160	Coperchio	Couvercle	Cover	Deckel
17	DR 3170	Vite	Vis	Screw	Schraube
18	DR 3180	Rondella	Rondelle	Washer	Scheibe
19	DR 3190	Ingrassatore	Graisseur	Grease cup	Schmiernippel
20	DR 3200	Pattino	Patin	Guide shoe	Gleitschienen
21	DR 3210	Chiusura	Fermeture	Cover	Gleitschiene
22	DR 3220	Staffa	Etrier	Bracket	Spanneisen
23	DR 3230	Vite	Vis	Screw	Schraube
24	DR 3240	Dado	Ecrou	Nut	Mutter
25	DR 3250	Supporto	Palier	Support	Halter
26	DR 3260	Supporto	Palier	Support	Halter
27	DR 3270	Staffa	Etrier	Bracket	Spanneisen
28	DR 3280	Supporto	Palier	Support	Lagergehäuse
29	DR 3290	Cuscinetto	Roulement	Bearing	Lager
30	DR 3300	Vite	Vis	Screw	Schraube
31	DR 3310	Dado	Ecrou	Nut	Mutter
32	DR 3320	Vite	Vis	Screw	Schraube
33	DR 3330	Rondella	Rondelle	Washer	Scheibe
34	DR 3340	Rondella	Rondelle	Washer	Scheibe
35	DR 3350	Vite	Vis	Screw	Schraube
36	DR 3360	Albero	Arbre	Shaft	Welle
37	DR 3370	Chiavetta	Clavette	Key	Keil
38	DR 3380	Vite	Vis	Screw	Schraube